MINI and MIX Series

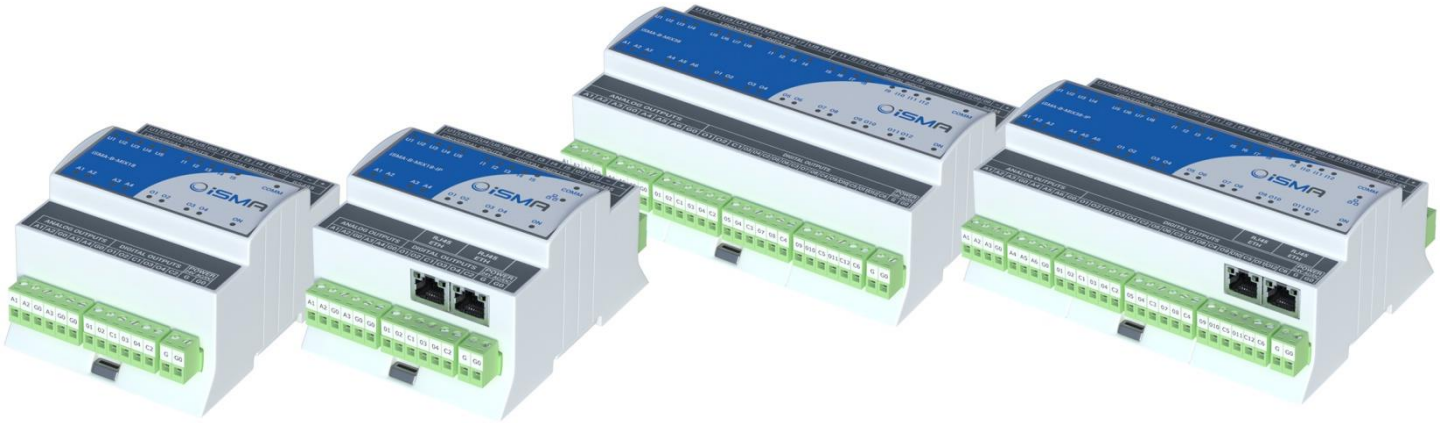

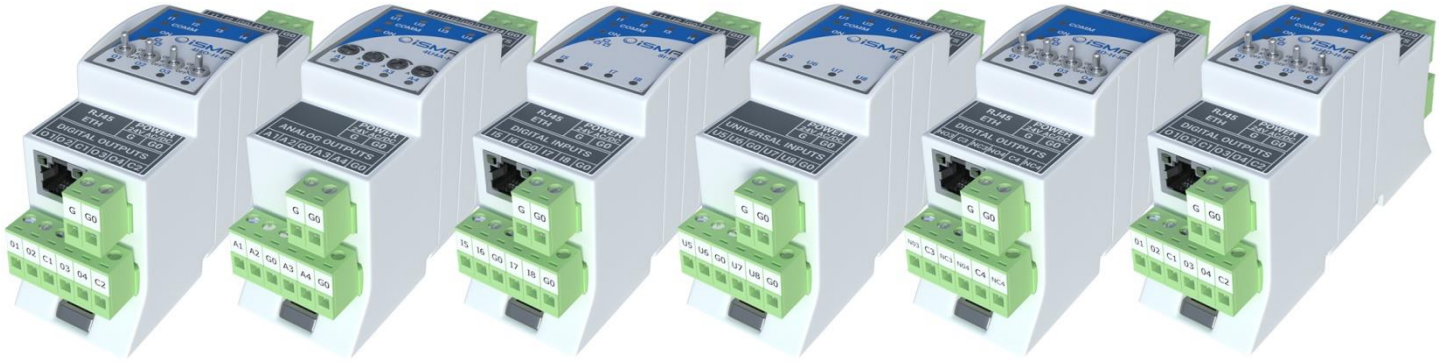

MINI and MIX Series I/O modules

BACnet

User Manual

GC5 Sp. z o.o.
Poland, Warsaw
www.gc5.com

1 Introduction 4
1.1 Safety rules. 4
1.2 Technical specifications 5
1.3 Summary table for all modules 7
1.4 Dimension 8
1.5 Power supply connection 9
1.5.1 DC power connection 9
1.5.2 AC power connection 9
1.6 Connecting the communication bus (RS485) 9
1.7 LED Indicators 10
1.8 Grounding and shielding RS485 11
1.9 RS 485 network termination 11
1.10 Setting Module MAC 11
1.11 Setting Device ID 12
1.12 Baud rate selection 13
1.13 Protocol selection 13
1.14 Restoring the default settings 13
1.15 Default Settings 14
2 Protocol implementation conformance statement 15
2.1 BACnet Protocol Implementation Conformance Statement 15
2.2 BACnet Standardized Device Profile 15
2.3 BACnet Interoperability Building Blocks Supported 15
2.4 BACnet Standard Object Types Supported 16
2.5 Data Link Layer Option 16
2.6 Character Sets Supported 16
2.7 Supported Application Services 16
2.8 Device BACnet Object 17
2.8.1 Device BACnet Object description 17
2.8.2 WATCHDOG Property 5001 18
2.8.3 VALID_FRAMES_FOR_US_CNT Property 5101 18
2.8.4 VALID_FRAMES_FOR_NOT_US_CNT Property 5102 18
2.8.5 ERROR_FRAMES_CNT Property 5103 18
2.8.6 TRANSMITTED_FRAMES_CNT Property 5104 18
3 Local I/O 19
3.1 Universal Inputs 19
3.1.1 Connection of universal input to measure voltage 0 – 10V 19
3.1.2 Connection of universal input to measure current 0 – 20mA 19
3.1.3 Connection of universal input to measure temperature 19
3.1.4 Connection of universal input as a digital input (Dry Contact) 20
3.1.5 BACnet Analog Input object description (Universal Input) 20
3.1.6 PRESENT_VALUE and UNITS Property 20
3.1.7 INPUT_TYPE Property 4001 21
3.1.8 RESOLUTION Property 4002 21
3.1.9 FILTER Property 4003 21
3.1.10 VOLTAGE Property 3010 21
3.1.11 RESISTANCE Property 3012 21
3.1.12 DRY_CONTACT Property 3013 21
3.2 Digital Inputs 22
3.2.1 Connection of digital input (Dry Contact) 22
3.2.2 BACnet Binary Input object description (Digital Input) 22
3.2.3 PRESENT_VALUE Property 22
3.2.4 COUNTER Property 3001 22
3.3 Analog Outputs 23
3.3.1 Connection of analog output 0 – 10V 23
3.3.2 Connecting relay to analog output 23
3.3.3 Connection an actuator to analog output 23
3.3.4 BACnet Analog Output object description (Analog Output) 24
3.3.5 PRESENT_VALUE Property 24
3.3.6 OUTPUT_TYPE Property 4001 24
3.3.7 HAND_STATUS Property 3014 25
3.3.8 HAND_VALUE Property 3015 25
3.4 Digital Outputs (relays) 26
3.4.1 Connecting the solenoid valve to the digital output 26
3.4.2 Connecting a resistive load to the digital output 26
3.4.3 BACnet Binary Output object description (Digital Output) 27
3.4.4 PRESENT_VALUE Property 27

3.4.5 HAND_STATUS Property 27
4 WEB Configuration- only IP version 28
4.1 Web server access 28
4.2 Device page 28
4.3 Local I/O status and configuration 29
4.3.1 Universal Inputs 29
4.3.2 Digital Inputs 30
4.3.3 Digital Outputs 30
4.3.4 Analog Outputs 31
4.4 RS485 Configuration 32
4.5 IP Configuration 33
4.6 Device management 34
4.7 Contact 34
5 List of supported temperature sensors 35

1 Introduction

1.1 Safety rules.

- Note incorrect wiring of this product can damage it and lead to other hazards. Make sure the product has been correctly wired before turning the power ON.
- Before wiring, or removing / mounting the product, be sure to turn the power OFF. Failure to do so might cause electric shock.
- Do not touch electrically charged parts such as the power terminals. Doing so might cause electric shock.
- Do not disassemble the product. Doing so might cause electric shock or faulty operation.
- Use the product within the operating ranges recommended in the specification (temperature, humidity, voltage, shock, mounting direction, atmosphere etc.). Failure to do so might cause fire or faulty operation
- Firmly tighten the wires to the terminal. Insufficient tightening of the wires to the terminal might cause fire.

1.2 Technical specifications

Power supply	Voltage	24V AC/DC ± 20%	
	Power consumption		
	Module type	@ 24VDC	@ 24VAC
	8I	0.4W	0.6VA
	8I-IP	1.4W	2.1VA
	8U	0.5W	0.8VA
	8U-IP	1.5W	2.3VA
	4I4O-H	1.2W	1.8VA
	4I4O-H-IP	2.2W	3.3VA
	4U4O-H	1.2W	1.8VA
	4U4O-H-IP	2.2W	3.3VA
	4U4A-H	2.2W	3.3VA
	4U4A-H-IP	3.2W	4.8VA
	4O-H	1.6W	2.4VA
	4O-H-IP	2.6W	3.9VA
	MIX18	3W	4.5VA
	MIX18-IP	4.4W	6.6VA
	MIX38	5W	7.5VA
	MIX38-IP	7.4W	11.1VA
Universal Inputs	Temperature input	Measurement with attached RTDs accuracy ±0,1˚C For sensor Pt1000 and Ni1000 use 16bit resolution	
	Voltage input	Voltage measurement from 0 to 10V Input impedance 100kΩ Measurement accuracy ±0,1% Measurement resolution 3mV@12bit and 1mV@16bit	
	Resistive input	Measurement of resistance from 0 to 1000kΩ Measurement resolution for 20kΩ load 20Ω@12bit and 1Ω@16bit	
	Resistance measurement method	The voltage divider	
	Dry contact input	Output current ~1mA	
	Measurement resolution	12 bits (default) or 16 bits	
	Processing time	10ms/channel at 12 bits 140ms/ channel at 16 bits	
Digital Inputs	Type	Dry contact	
	Max input frequency	100Hz	
Analog Outputs	Voltage range	0 to 10V	
	Max. load current	20mA	

	Resolution	12 bits
	Accuracy	±0.5%
Digital Outputs (relays)	Resistive load	3A @ 230VAC or 3A @ 30VDC 8A @ 230VAC or 8A @ 30VDC- **only 4O-H and 4O-H-IP**
	Inductive load	75VA @ 230VAC or 30W @ 30VDC 360VA@ 230VAC or 90W @ 30VDC- **only 4O-H and 4O-H-IP**
RS485 Interface	RS485	Up to 128 devices
	Communication protocols	Modbus RTU, Modbus ASCII or BACnet set by switch
	Baud rate	From 2400 to 115200 set by switch
	Address	0 to 99 set by switch
Ethernet	**MIX18-IP, MIX38-IP**	
	2x Fast Ethernet	Switch mode
	Baud rate	10/100 Mb/s
	8I-IP, 8U-IP, 4I4O-H-IP, 4u4O-H-IP, 4U4A-H-IP, 4O-H-IP	
	1x Fast Ethernet	
	Baud rate	10/100 Mb/s
USB	USB	Mini USB 2.0
Ingress protection	IP	IP40
Temperature	Storage	– 40˚C to +85˚C
	Operating	– 10˚C to +50˚C
Humidity	Relative	5 to 95%
Connectors	Type	Removable
	Maximum cable size	2.5 mm^2
Dimension	**MIX18, MIX18-IP**	
	Width	110 mm
	Length	88 mm
	Height	62 mm
	MIX38, MIX38-IP	
	Width	110 mm
	Length	160 mm
	Height	62 mm
	MINI Series	
	Width	110 mm
	Length	37 mm
	Height	62 mm

Table 1 Technical specification

1.3 Summary table for all modules

Module type	UI	DI	AO	DO	Modbus RS485	Modbus TCP/IP	Bacnet MSTP	Bacnet IP
4I4O-H		4		4	✓		✓	
4I4O-H-IP		4		4	✓	✓		✓
4O-H				4 (NC/NO-8A)	✓		✓	
4O-H-IP				4 (NC/NO-8A)	✓	✓		✓
4U4A-H	4		4		✓		✓	
4U4A-H-IP	4		4		✓	✓		✓
4U4O-H	4			4	✓		✓	
4U4O-H-IP	4			4	✓	✓		✓
8I		8			✓		✓	
8I-IP		8			✓	✓		✓
8U	8				✓		✓	
8U-IP	8				✓	✓		✓
MIX18	5	5	4	4	✓		✓	
MIX18-IP	5	5	4	4	✓	✓		✓
MIX38	8	12	6	12	✓		✓	
MIX38-IP	8	12	6	12	✓	✓		✓
					RTU ASCII	Modbus Gateway IP/RS485	Master Slave	

Table 2 Summary table for all modules

1.4 Dimension

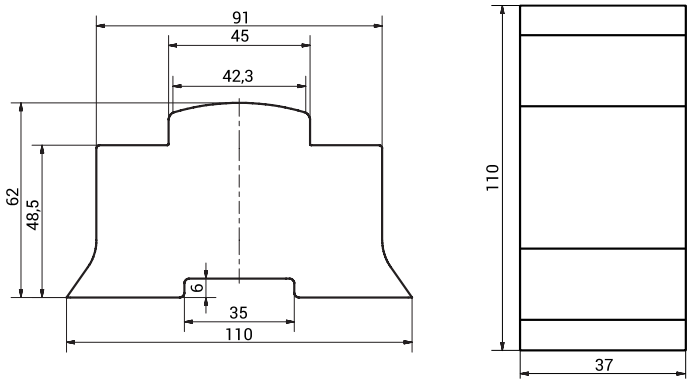

Figure 1 MINI series dimension

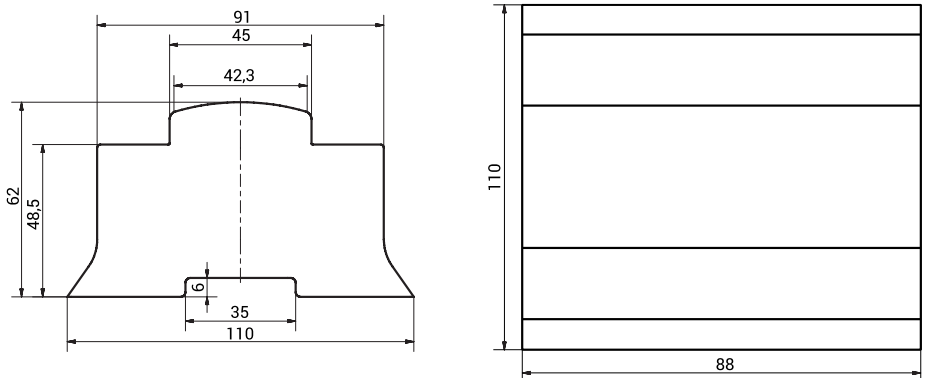

Figure 2 MIX18 and MIX18-IP dimension

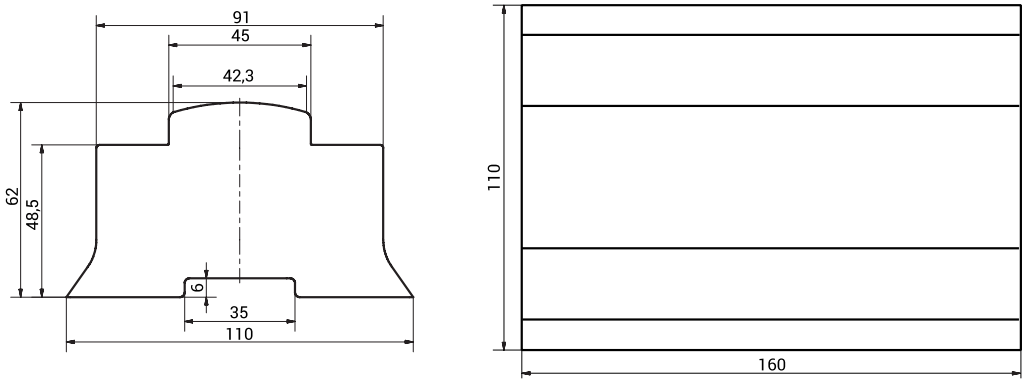

Figure 3 MIX38 and MIX38-IP dimension

1.5 Power supply connection

1.5.1 DC power connection

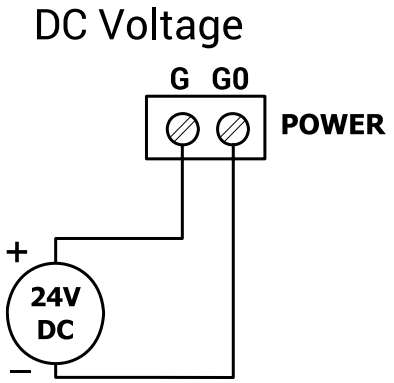

Figure 4 DC power supply connection

1.5.2 AC power connection

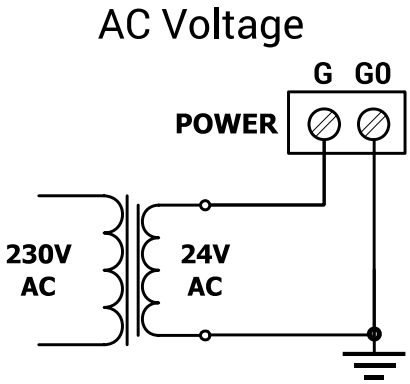

Figure 5 AC power supply connection

1.6 Connecting the communication bus (RS485)

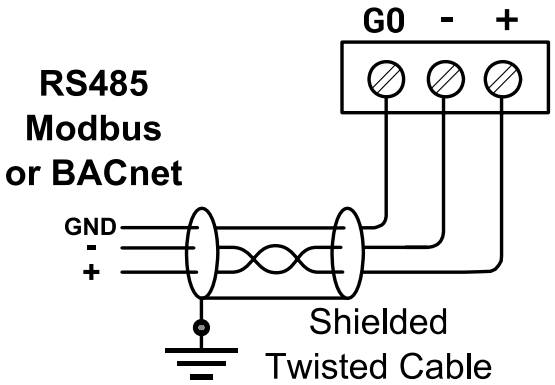

Figure 6 RS485 connection

1.7 LED Indicators

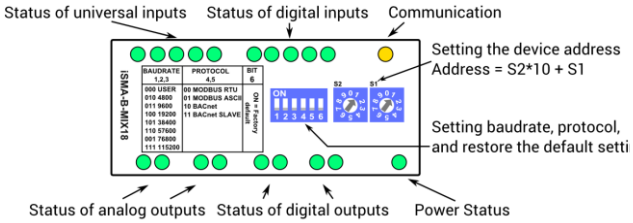

Figure 7 Top panel MIX18

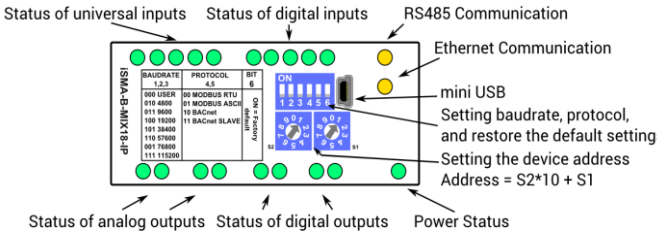

Figure 8 Top panel MIX18-IP

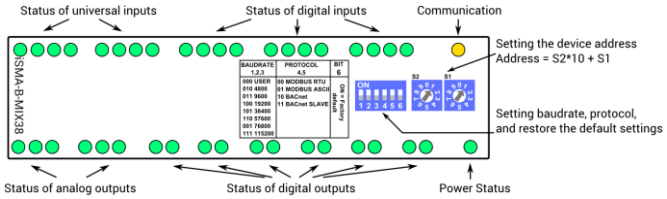

Figure 9 Top panel MIX38

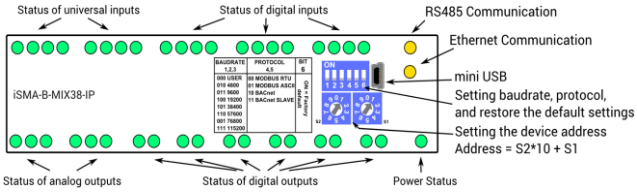

Figure 10 Top panel MIX38-IP

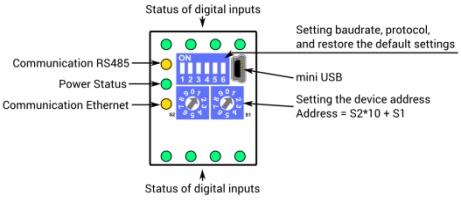

Figure 11 Top panel 8I and 8I-IP

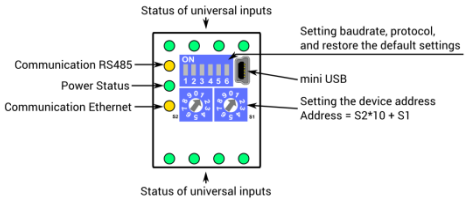

Figure 12 Top panel 8U and 8U-IP

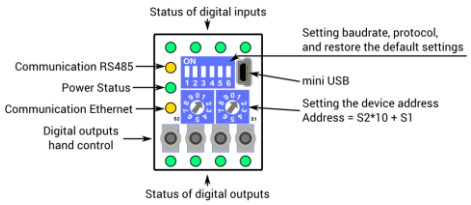

Figure 13 Top panel 4I4O-H and 4I4O-H-IP

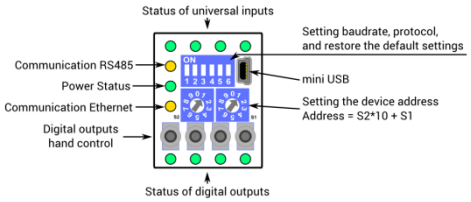

Figure 14 Top panel 4U4O-H and 4U4O-H-IP

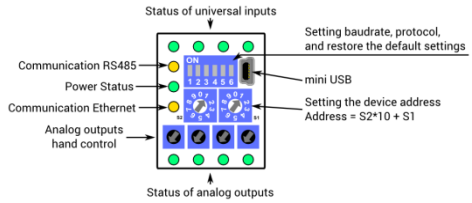

Figure 15 Top panel 4U4A-H and 4U4A-H-IP

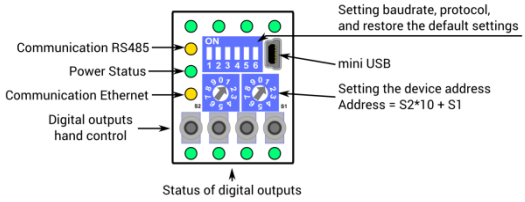

Figure 16 Top panel 4O-H and 4O-H-IP

- The power LED is ON (green) when the module is running properly.
- Communication LED is ON (orange) for 20 ms after sending each message. If the module receives / sends a lot of messages LED can be lit continuously.
- LEDs indicate the status of the universal inputs are lit when resistance connected to the input is less than 1kΩ (Dry Contact input is active). Caution! The LED also lights up when voltage connected to the input has a very low potential.
- LEDs indicate the status of the digital inputs are lit when the input is active.
- LEDs indicate the status of the analog outputs are lit when output voltage or PWM factor is different from 0.
- LEDs indicate the status of the digital outputs are lit when output is enabled.

1.8 Grounding and shielding RS485

In most cases, IO modules will be installed in an enclosure along with other devices which generate electromagnetic radiation. Examples of these devices are relays, contactors, transformers, motor invertors etc. This electromagnetic radiation can induce electrical noise into both power and signal lines, as well as direct radiation into the module causing negative effects on the system. Appropriate grounding, shielding and other protective steps should be taken at the installation stage to prevent these effects. These protective steps include control cabinet grounding, cable shield grounding, protective elements for electromagnetic switching devices, correct wiring as well as consideration of cable types and their cross sections.

1.9 RS 485 network termination

Transmission line effects often present a problem on data communication networks. These problems include reflections and signal attenuation.

To eliminate the presence of reflections from the end of the cable, the cable must be terminated at both ends with a resistor across the line equal to its characteristic impedance. Both ends must be terminated since the direction of propagation is bidirectional. In the case of an RS485 twisted pair cable this termination is typically 120 Ω.

1.10 Setting Module MAC

To determine the MAC of device, module provides two rotary switches S1 and S2 located on the top panel of the device.

It is possible to set the MAC from 0 to 99 in BACnet protocol mode or from 128 to 227 in BACnet SLAVE protocol mode (128 + switch value). The formula for setting the MAC:

$$MAC = S2 \cdot 10 + S1$$

Where S1 and S2 are values of switches.

An example for BACnet Master protocol mode:

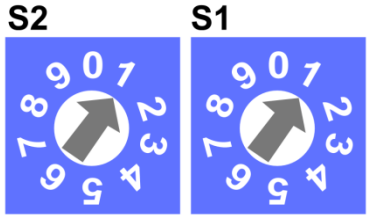

Figure 17 Sample of setting MAC in Master mode

Switches set as in figure above will set the module MAC to 11.

An example for BACnet Slave protocol mode(only RS485 modules, IP modules do not support BACnet Slave).

:

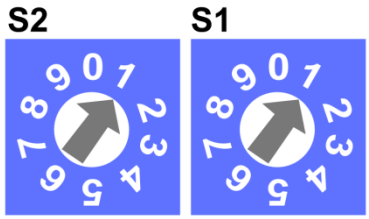

Figure 18 Sample of setting MAC in Slave mode

Switch sets as in the picture above will set the module MAC to 139 (128+11).

1.11 Setting Device ID

Formula for Device ID:

DeviceID = VendorID*1000 + MAC + 128(Only in BACnet SLAVE)

Where GC5 VendorID = 826.

An example: If MAC is set to 41and BACnet protocol than DeviceID = 826041 or if in BACnet SLAVE than DeviceID = 826169

If user change Device ID (by setting a new value of Device ID property in Device object) then change of MAC by rotary switches does not change Device ID. To allows again change Device ID by changing MAC the device need to be restore to Default Settings.

.

1.12 Baud rate selection

Transmission baud rate is determined by S3 switch (sections 1, 2 and 3) in accordance with the following table:

1	2	3	Baud rate
OFF (0)	OFF (0)	OFF (0)	Defined by the user in the registry
OFF (0)	OFF (0)	ON (1)	76800
OFF (0)	ON (1)	OFF (0)	4800
OFF (0)	ON (1)	ON (1)	9600
ON (1)	OFF (0)	OFF (0)	19200
ON (1)	OFF (0)	ON (1)	38400
ON (1)	ON (1)	OFF (0)	57600
ON (1)	ON (1)	ON (1)	115200

Table 3 Baud rate selection

1.13 Protocol selection

Protocol selection is done by sections 4 and 5 of the S3 switch according to table:

4	5	Protocol
OFF (0)	OFF (0)	Modbus RTU
OFF (0)	ON (1)	Modbus ASCII
ON (1)	OFF (0)	BACnet Master
ON (1)	ON (1)	BACnet Slave

Table 4 Protocol selection

Worning ! BACnet SLAVE mode does not support discover function.

1.14 Restoring the default settings

To restore the default configuration of all registers, follow the steps below:

1. Turn off power supply
2. Set section 6 of S3 switch to ON
3. Turn on power supply, power LED blinking
4. Switch section 6 of S3 switch to OFF to restore the default settings. To cancel the reset, turn off the power and switch section 6 of S3 switch to the OFF position.

1.15 Default Settings

Out of the box device as well as after restoring default values procedure, has got the following default registers values:

Register Name	Default Value
COUNTER 1 – 12	0
BAUD RATE	7680 (76800 bps)
STOP BITS	1
DATA BITS	8
PARITY BITS	0
RESPONSE DELAY	0
WATCHDOG TIME	0 (disabled)
DEFAULT DIGITAL OUTPUTS AFTER START	0
STATE OF THE ANALOG OUTPUTS (DIGITAL) AFTER START	0
STATE OF THE ANALOG OUTPUTS (1 - 4) AFTER START	0
UNIVERSAL INPUT CONFIGURATION 1 – 5	1
INPUT FILTER TIME CONSTANT	2
UNIVERSAL INPUT RESOLUTION	0
ANALOG OUTPUT CONFIGURATION	0

Table 5 Default values

2 Protocol implementation conformance statement

Warning!: Changing the parameters configuring transmission (except for registers which value is read from the switch) will only take effect after restarting the unit.

2.1 BACnet Protocol Implementation Conformance Statement

Date	2015-07-26
Vendor Name	Global Control 5 Sp. z o.o.
Product Name	iSMA-B-MIX iSMA-B-MINI
Product Model Number	iSMA-B-MIX18 iSMA-B-MIX38 iSMA-B-8I iSMA-B-8U iSMA-B-4O-H iSMA-B-4I4O-H iSMA-B-4U4O-H iSMA-B-4U4A-H
Firmware Revision	1.0
BACnet Protocol Revision	1.12

Table 6 BACnet Protocol Implementation Conformance Statement

2.2 BACnet Standardized Device Profile

All I-O modules has been standardize as BACnet Smart Sensor (B-SS)

2.3 BACnet Interoperability Building Blocks Supported

Application Service (B-SS)	Designation
Data Sharing - Read Property - B	DS-RP-B
Data Sharing - Write Property - B	DS-WP-B
Device Management - Dynamic Device Binding - B	DM-DDB-B
Device Management - Dynamic Object Binding - B	DM-DOB-B
Data Sharing - Read Property Multiple - B	DS-RPM-B
Data Sharing - Write Property Multiple - B	DS-WPM-B

Table 7 Building Blocks Supported

2.4 BACnet Standard Object Types Supported

The following is a list of the standard object types as defined by ASHRAE.

Object Name	Object Numbers for different type of modules							
	8U, 8U-IP	8I, 8I-IP	4I4O-H, 4I4O-H-IP	4U4O-H, 4U4O-H-IP	4U4A-H, 4U4A-H-IP	4O-H, 4O-H-IP	MIX18, MIX18-IP	MIX38, MIX38-IP
Analog Input	8			4	4		5	8
Analog Output					4		4	6
Binary Input		8	4				5	12
Binary Output			4	4		4	4	12
Accumulator		8	4				5	12
Device	1	1	1	1	1	1	1	1

Table 8 Objects types supported by modules

2.5 Data Link Layer Option

- Master-Slave/Token-Passing (MS/TP) master (Clause 9), baud rates: 2400, 4800, 9600, 19200, 38400, 57600, 76800, 115200
- MS/TP slave (Clause 9), baud rates: 2400, 4800, 9600, 19200, 38400, 57600, 76800, 115200
- BACnet Internet Protocol (IP) (Annex J)
- BACnet IP (Annex J), Foreign Device

2.6 Character Sets Supported

ANSI X3.4

2.7 Supported Application Services

Application Service	Initiates Requests	Executes Requests
I-Am	yes	
I-Have	yes	
ReadProperty		yes
ReadPropertyMultiple		Yes
Who-Has		yes
Who-Is		yes
WriteProperty		yes
WritePropertyMultiple		yes

Table 9 Supported Application Services

2.8 Device BACnet Object

2.8.1 Device BACnet Object description

Dynamically Creatable: No, Dynamically Deletable: No

Property Name	Required	Proprietary	Writeable	Property ID	Data Type	Description
OBJECT_IDENTIFIER	yes					iSMA-B-MIX38
OBJECT_NAME	yes					
OBJECT_TYPE	yes					
SYSTEM_STATUS	yes					
VENDOR_NAME	yes					
VENDOR_IDENTIFIER	yes					
MODEL_NAME	yes					
FIRMWARE_REVISION	yes					
APPLICATION_SOFTWARE_VERSION	yes					
PROTOCOL_VERSION	yes					
PROTOCOL_REVISION	yes					
PROTOCOL_SERVICES_SUPPORTED	yes					
PROTOCOL_OBJECT_TYPES_SUPPORTED	yes					
OBJECT_LIST	yes					
MAX_APDU_LENGTH_ACCEPTED	yes					
SEGMENTATION_SUPPORTED	yes					
APDU_TIMEOUT	yes					
NUMBER_OF_APDU_RETRIES	yes					
MAX_MASTER	yes		yes			
MAX_INFO_FRAMES	yes					
DEVICE_ADDRESS_BINDING	yes					
DATABASE_REVISION	yes					
WATCHDOG		yes	yes	5001	Unsigned	2.8.2 WATCHDOG Property
VALID_FRAMES_FOR_US_CNT		yes		5101	Unsigned	
VALID_FRAMES_NOT_FOR_US_CNT		yes		5102	Unsigned	
ERROR_FRAMES_CNT		yes		5103	Unsigned	
TRANSMITTED_FRAMES_CNT		yes		5104	Unsigned	

Table 10 Device BACnet Object

2.8.2 WATCHDOG Property 5001

This property specifies the time in seconds to watchdog reset. If module does not receive any valid BACnet message within that time, all PRIORITY_ARRAYs will be set to null and PRESENT_VALUE for outputs will be set to RELINQUISH_DEFAULT value.

This feature is useful if for some reason there is an interruption in data transmission and for security reasons output states must be set to the appropriate state endanger the safety of persons or property.

The default value is 0 seconds which means the watchdog function is disabled.

2.8.3 VALID_FRAMES_FOR_US_CNT Property 5101

This property contains number of valid frames (on MS/TP layer) addressed to this module.

2.8.4 VALID_FRAMES_FOR_NOT_US_CNT Property 5102

This property contains number of valid frames (on MS/TP layer) but not addressed to this module.

2.8.5 ERROR_FRAMES_CNT Property 5103

This property contains number of invalid frames on MS/TP layer.

2.8.6 TRANSMITTED_FRAMES_CNT Property 5104

This property contains number of transmitted frames.

3 Local I/O

3.1 Universal Inputs

3.1.1 Connection of universal input to measure voltage 0 – 10V

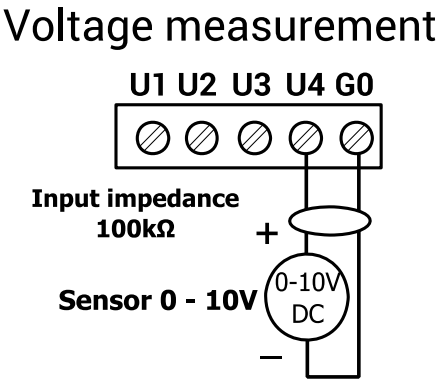

Figure 19 Connection of UI to measure 0-10 VDC for MIX38 and MIX38-IP

3.1.2 Connection of universal input to measure current 0 – 20mA

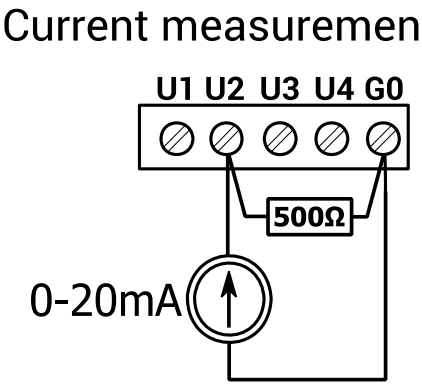

Figure 20 Connection of UI to measure 0-20 mA for MIX38 and MIX38-IP

3.1.3 Connection of universal input to measure temperature

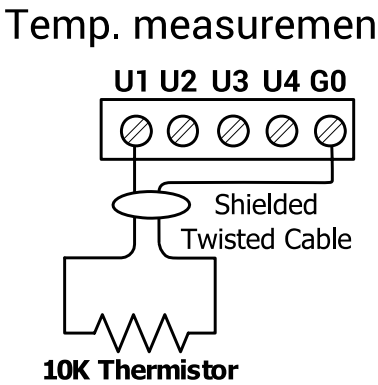

Figure 21 Connection of UI to measure temperature for MIX18 and MIX18-IP

3.1.4 Connection of universal input as a digital input (Dry Contact)

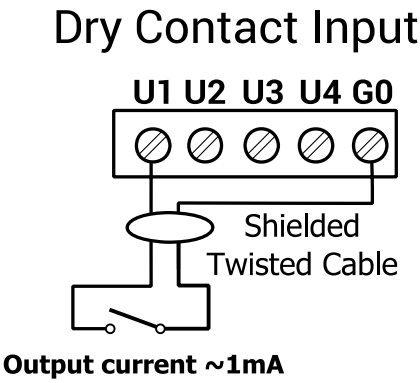

Figure 22 Connection of UI to work as DI for MIX38 and MIX38-IP

3.1.5 BACnet Analog Input object description (Universal Input)

Each Universal Input of all types of modules is represented on BACnet network as BACnet Analog Input Object which has got the following properties:

Dynamically Creatable: No, Dynamically Deletable: No

Property Name	Required	Proprietary	Writeable	Property ID	Data Type	Description
OBJECT_IDENTIFIER	yes					from UI-1 to UI-8
OBJECT_NAME	yes					
OBJECT_TYPE	yes					
PRESENT_VALUE	yes					3.1.6 PRESENT_VALUE and UNITS Property
STATUS_FLAGS	yes					
EVENT_STATE	yes					
OUT_OF_SERVICE	yes					
UNITS	yes					3.1.6 PRESENT_VALUE and UNITS Property
INPUT_TYPE		yes	yes	4001	Enumerated	3.1.7 INPUT_TYPE Property
RESOLUTION		yes	yes	4002	Enumerated	3.1.8 RESOLUTION Property
FILTER		yes	yes	4003	Unsigned	3.1.9 FILTER Property
VOLTAGE		yes		3010	Unsigned	3.1.10 VOLTAGE Property
RESISTANCE		yes		3012	Unsigned	3.1.11 RESISTANCE Property
DRY_CONTACT		yes		3013	Enumerated	3.1.12 DRY_CONTACT Property

Table 11 Properties of BACnet Analog Iput Object

3.1.6 PRESENT_VALUE and UNITS Property

This properties contain actual value and unit of universal input according to INPUT_TYPE property value.

3.1.7 INPUT_TYPE Property 4001

This property is used to configure a universal input in accordance with the following table:

Property value	Description
0	Voltage measuring 0-10V
1 (default)	The temperature sensor 10K3A1 NTC B=3975K
2	The temperature sensor 10K4A1 NTC B=3695K
3	The temperature sensor 10K NTC B=3435K Carel
4	The temperature sensor 20K6A1 NTC B=4262K
5	The temperature sensor 2,2K3A1 NTC B=3975K
6	The temperature sensor 3K3A1 NTC B=3975K
7	The temperature sensor 30K6A1 NTC B=4262K
8	The temperature sensor SIE1
9	The temperature sensor TAC1
10	The temperature sensor SAT1
16	The temperature sensor Pt1000
17	The temperature sensor Ni1000
254	Resistance input
255	Dry Contact input

Table 12 Input Type property

3.1.8 RESOLUTION Property 4002

This property is used to determine the bit resolution for each universal input.

Setting the value to 0 will set the resolution of converter to 12 bit. Setting the value to 1 sets the resolution of converter to 16-bit.

Caution! Setting 16-bit resolution increases measurement time of one channel from 10ms to 140ms. Total time taken to measure all the channels increases from 80ms to 1120ms.

3.1.9 FILTER Property 4003

Property with a time constant low pass filter. The value is expressed in seconds. Valid values must be between 0 and 60 seconds. The default filter value is 2 seconds.

3.1.10 VOLTAGE Property 3010

Value of this property is the results of the voltage measurement for input. The result is expressed in mV.

3.1.11 RESISTANCE Property 3012

Value of this property is the results of the resistance measurement for input. The result is expressed in Ω.

3.1.12 DRY_CONTACT Property 3013

Value of this property contains information about the status of digital inputs (dry contact). Short the input to ground will set value to 1.

3.2 Digital Inputs

3.2.1 Connection of digital input (Dry Contact)

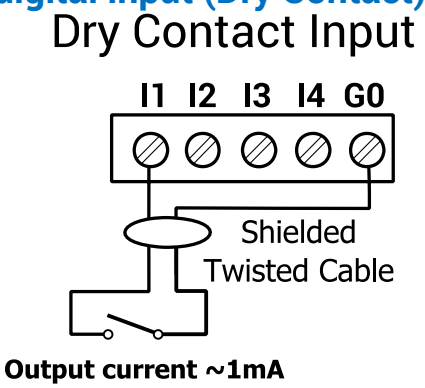

Figure 23 Connection of DI for MIX38 and MIX38-IP

3.2.2 BACnet Binary Input object description (Digital Input)

Each Digital Input of all types of modules is represented on BACnet network as BACnet Binary Input Object which has got the following properties:

Dynamically Creatable: No, Dynamically Deletable: No

Property Name	Required	Proprietary	Writeable	Property ID	Data Type	Description
OBJECT_IDENTIFIER	yes					from DI-1 to DI-12
OBJECT_NAME	yes					
OBJECT_TYPE	yes					
PRESENT_VALUE	yes					3.2.3 PRESENT_VALUE Property
STATUS_FLAGS	yes					
EVENT_STATE	yes					
OUT_OF_SERVICE	yes					
POLARITY	yes					
UNITS	yes					
COUNTER		yes	yes	3001	unsigned	3.2.4 COUNTER Property

Table 13 Properties of BACnet Binary Input Object

3.2.3 PRESENT_VALUE Property

This property contains the status of the digital inputs. Short-circuiting the input to GND sets the value to 1.

3.2.4 COUNTER Property 3001

This property contains number of counted pulses.

In the case you would like to change the value of the property you can write any value (called preset). In the particular case, you can reset the counter by entering 0.

3.3 Analog Outputs

3.3.1 Connection of analog output 0 – 10V

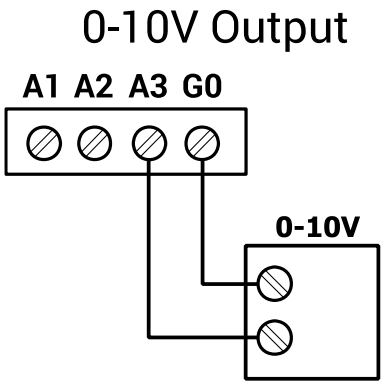

Figure 24 Connection of AO for MIX38 and MIX38-IP

3.3.2 Connecting relay to analog output

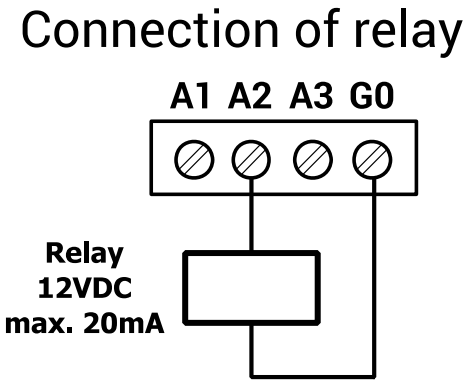

Figure 25 Connection of AO to the relay for MIX38 and MIX38-IP

3.3.3 Connection an actuator to analog output

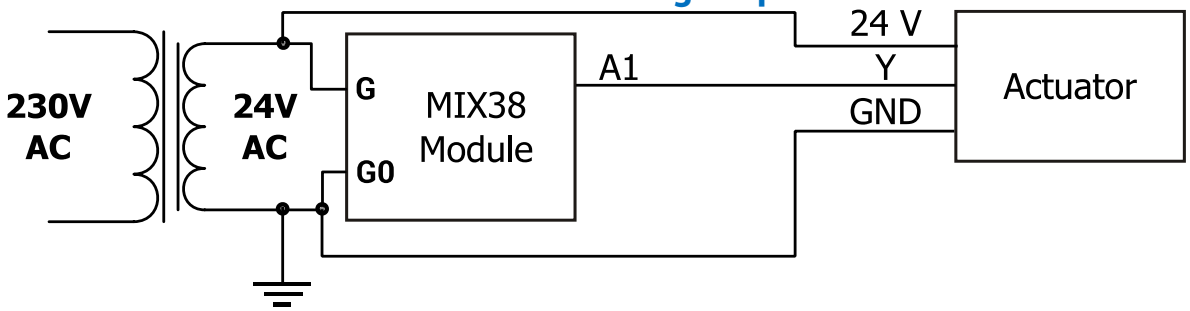

Figure 26 Connection an actuator to AO

3.3.4 BACnet Analog Output object description (Analog Output)

Each Analog Output of all types of modules is represented on BACnet network as BACnet Analog Output Object which has got the following properties:

Dynamically Creatable: No, Dynamically Deletable: No

Property Name	Required	Proprietary	Writeable	Property ID	Data Type	Description
OBJECT_IDENTIFIER	yes					from AO-1 to AO-6
OBJECT_NAME	yes					
OBJECT_TYPE	yes					
PRESENT_VALUE	yes		yes			3.3.5 PRESENT_VALUE Property
STATUS_FLAGS	yes					
EVENT_STATE	yes					
OUT_OF_SERVICE	yes					
UNITS	yes					
PRIORITY_ARRAY	yes					
RELINQUISH_DEFAULT	yes		yes			
OUTPUT_TYPE		yes	yes	4001	enumerated	3.3.6 OUTPUT_TYPE Property 4001
Only for 4O-H, 4O-H-IP, 4I4O-H, 4I4O-H-IP, 4U4O-H, 4U4O-H-IP						
HAND_STATUS		yes		3014	boolean	3.3.7 HAND_STATUS Property
HAND_VALUE		yes		3015	enumerated	3.3.8 HAND_VALUE Property

Table 14 Properties of BACnet Analog Output Object

3.3.5 PRESENT_VALUE Property

In the property is stored value in mV of voltage that appears at the analog output.

If OUTPUT_TYPE Property is set to PWM than PRESENT_VALUE contains duty cycle (in percentage) of output PWM signal.

3.3.6 OUTPUT_TYPE Property 4001

This property contain information about the mode of the analog output according to following table:

Property value	Description
0 (default)	Voltage output 0 – 10V
1	PWM 1Hz
2	PWM 10Hz
3	PWM 100Hz
4	PWM 0.1 HZ
5	PWM 0.01Hz

Table 15 Output Type property

3.3.7 HAND_STATUS Property 3014

In this property is stored value of Hand Status Operation according to the below table:

Property Value	Description
false	Auto Operation
true	Hand Operation

Table 16 AO Hand Status Property

3.3.8 HAND_VALUE Property 3015

In this property is stored percentage value (0%-100%) of the physical AO which is in Hand Operation.

3.4 Digital Outputs (relays)

3.4.1 Connecting the solenoid valve to the digital output

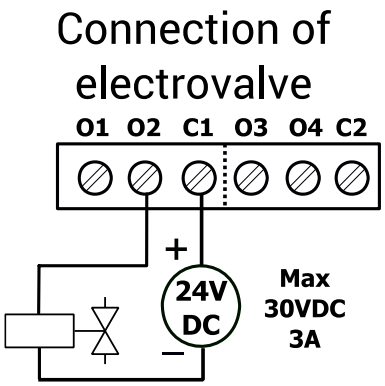

Figure 27 Connection of solenoid valve to DO for MIX38 and MIX38-IP

3.4.2 Connecting a resistive load to the digital output

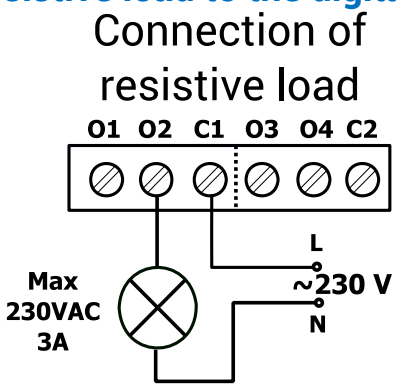

Figure 28Connection of resistive load to DO for MIX38 and MIX38-IP

3.4.3 BACnet Binary Output object description (Digital Output)

Each Digital Output of all types of modules is represented on BACnet network as BACnet Binary Output Object which has got the following properties:

Dynamically Creatable: No, Dynamically Deletable: No

Property Name	Required	Proprietary	Writeable	Property ID	Data Type	Description
OBJECT_IDENTIFIER	yes					from DO-1 to DO-12
OBJECT_NAME	yes					
OBJECT_TYPE	yes					
PRESENT_VALUE	yes		yes			3.4.4 PRESENT_VALUE Property
STATUS_FLAGS	yes					
EVENT_STATE	yes					
OUT_OF_SERVICE	yes					
POLARITY	yes					
PRIORITY_ARRAY	yes					
RELINQUISH_DEFAULT	yes		yes			
HAND_STATUS		yes		3014	enumerated	3.4.5 HAND_STATUS Property

Table 17 Properties of BACnet Digital Output Object

3.4.4 PRESENT_VALUE Property

In the property is stored actual value of Digital Output. Please note that if DO is in Hand Mode the actual value of DO is stored in HAND_STATUS Property.

3.4.5 HAND_STATUS Property

In the property is stored status of Hand Operation Switch and as well the status of DO in Hand Mode, according to the below table:

Value of Hand status	Status Description
0	AUTO
2	HAND OUT = false
3	HAND OUT = true

Table 18 DO Hand Status Property

4 WEB Configuration- only IP version

4.1 Web server access

All IP version modules have build in web server, which allows to show module status and to change configuration.

To access web server open browser and entre IP address of the module, default address for new module (default IP address is 192.168.1.123). Please use the following credentials :

Username: admin

Password: 1000 (by default)

4.2 Device page

This page contains information and technical specification of the device. The Basic Information section includes information about module type, firmware version and uptime. In the Device Specification there are information about: Power Supply, Inputs / Outputs parameters, Interfaces and Mechanical.

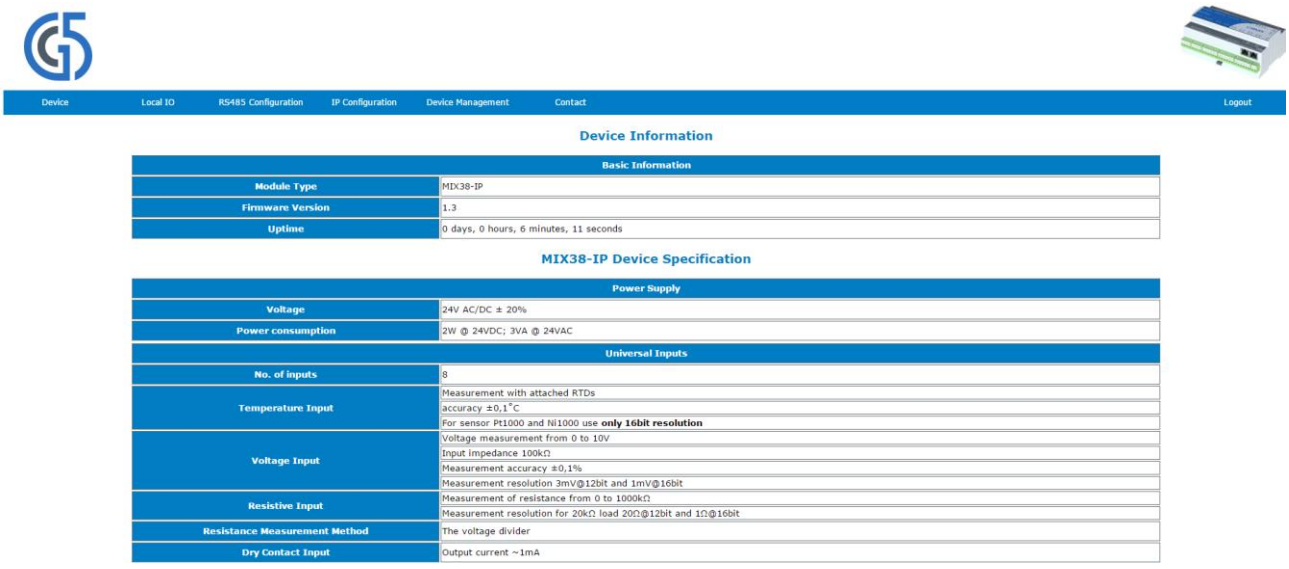

Device | Local IO | RS485 Configuration | IP Configuration | Device Management | Contact | Logout

Device Information

Basic Information	
Module Type	MIX38-IP
Firmware Version	1.3
Uptime	0 days, 0 hours, 6 minutes, 11 seconds

MIX38-IP Device Specification

Power Supply	
Voltage	24V AC/DC ± 20%
Power consumption	2W @ 24VDC; 3VA @ 24VAC
Universal Inputs	
No. of inputs	8
Temperature Input	Measurement with attached RTDs accuracy ±0,1°C For sensor Pt1000 and Ni1000 use **only 16bit resolution**
Voltage Input	Voltage measurement from 0 to 10V Input impedance 100kΩ Measurement accuracy ±0,1% Measurement resolution 3mV@12bit and 1mV@16bit
Resistive Input	Measurement of resistance from 0 to 1000kΩ Measurement resolution for 20kΩ load 20Ω@12bit and 1Ω@16bit
Resistance Measurement Method	The voltage divider
Dry Contact Input	Output current ~1mA

Figure 29 Device page of MIX38-IP

4.3 Local I/O status and configuration

4.3.1 Universal Inputs

This page allows to enter configuration parameters and show actual value of Universal Inputs. To open this page please navigate to Local IO tab and choose Universal Inputs from submenu.

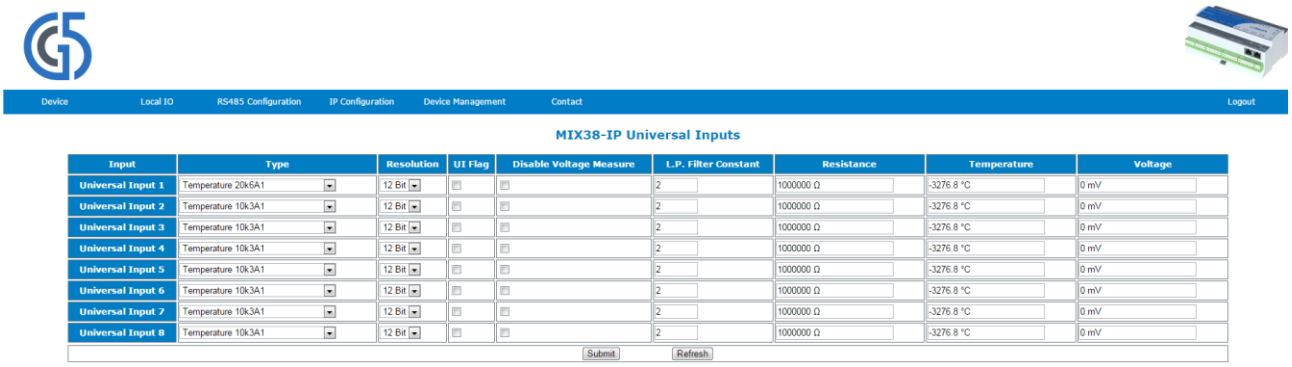

Figure 30 Universal Inputs page of MIX38-IP

Universal Input table has the following fields:

- Sensor type (Read & Write) allows to set different type of sensor as show below:

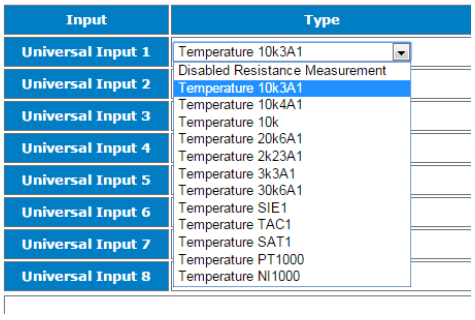

Figure 31 Types of sensors

- Resolution (Read & Write), resolution measurement 12bits / 16bits (for PT1000 and Ni1000 sensors please use 16bits).
- UI Flag (Read Only), status of UI as DI.
- Disable Voltage Measurement (Read & Write), disable voltage measuring for resistance measurement only.
- L.P. Filter Constant (Read & Write),parameter time constant low pass filter in seconds. Valid values must be between 0 and 60 seconds (default 2s). Setting value 0 will disable the filter.
- Resistance (Read Only), in ohms from 0 to 1000k [Ω]
- Temperature (Read Only), in Celsius with an accuracy of 1 decimal [°C]
- Voltage (Read Only) in milivots [mV].

Warning ! To save changes please use "Submit" button.

4.3.2 Digital Inputs

This page allows to enter configuration parameters and shows actual value of Digital Inputs. To open this page please navigate to Local IO tab and choose Digital Inputs from submenu.

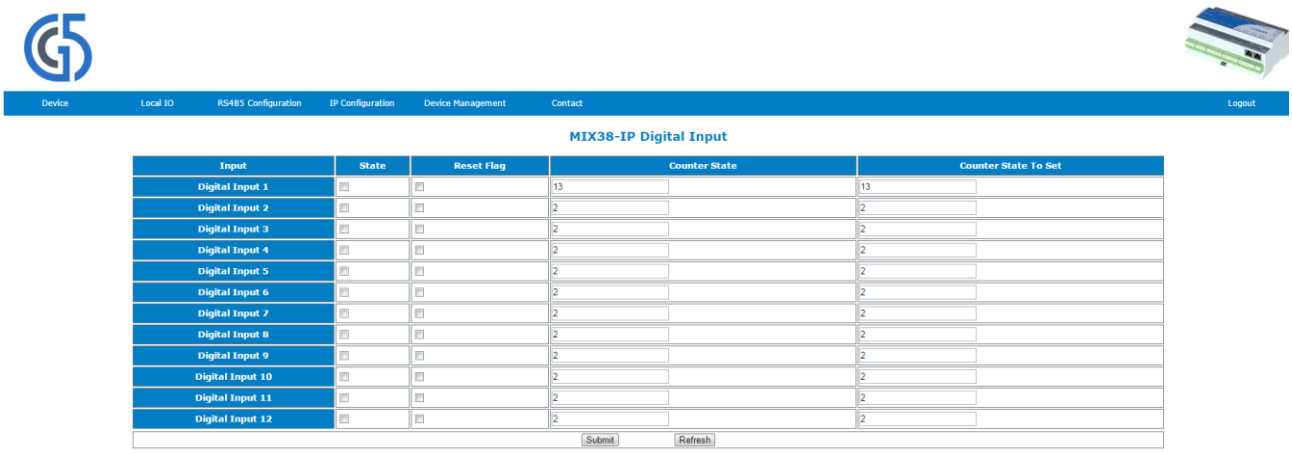

Figure 32 Digital Inputs page of MIX38-IP

Digital Input table has the following fields:

- State (Read Only), actual input state
- Reset Flag (Read & Write), reset of pulses value (leaving reset active will case resetting pulses value),
- Counter State (Read Only), actual value of pulses save in EEPROM
- Counter State To Set (Read & Write), allows to set value of counter

Warning ! To save changes please use “Submit” button.

4.3.3 Digital Outputs

This page allows to enter configuration parameters and show actual value of Digital Outputs. To open this page please navigate to Local IO tab and choose Digital Outputs from submenu.

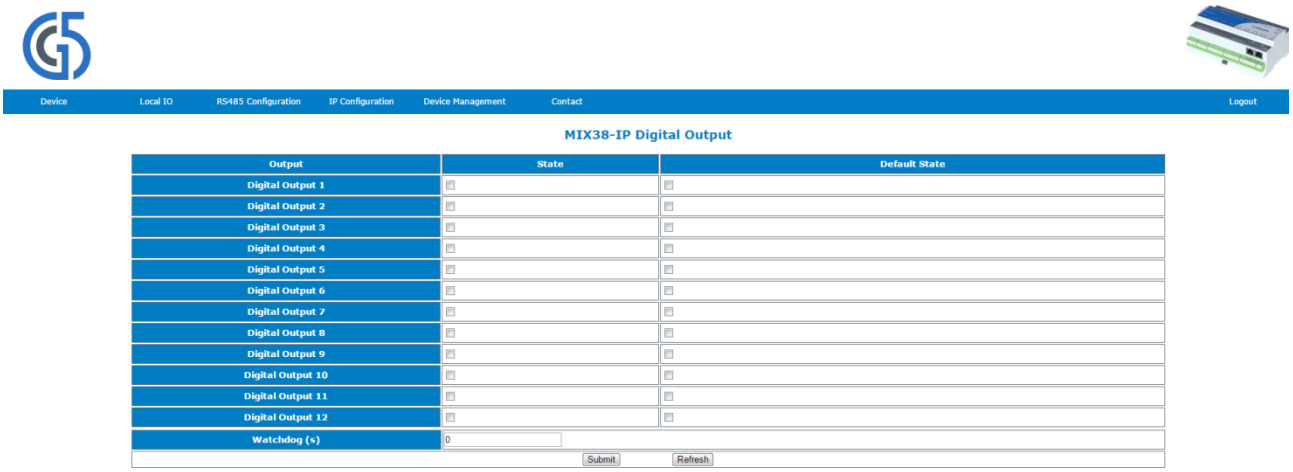

Figure 33 Digital Outputs page of MIX38-IP

Digital Outputs table has the following fields:

- State (Read & Write), actual state of digital output,
- Default State (Read & Write), output state after power up and watchdog.
- Watchdog (Read & Write),device watchdog value in seconds.
-

Warning ! To save changes please use “Submit” button.

4.3.4 Analog Outputs

This page allows to enter configuration parameters and show actual value of Analog Outputs. To open this page please navigate to Local IO tab and choose Analog Outputs from submenu.

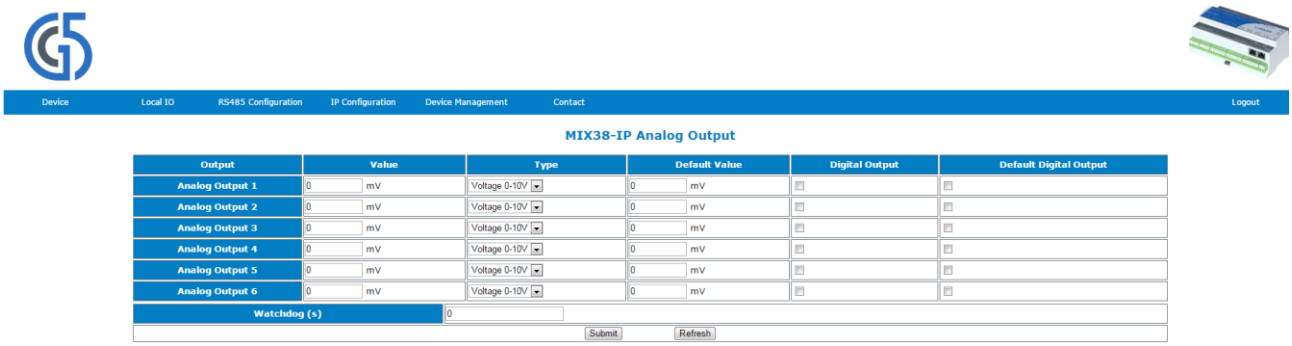

Figure 34 Analog Outputs page of MIX38-IP

Analog Outputs table has the following fields:

- Value (Read & Write), actual value of analog output in milivolts [mV],
- Type (Read & Write), analog output working mode voltage / PWM.
- Default Value (Read & Write). default output value after power up and watchdog.
- Digital Output (Read & Write). output status flag for DO mode.
- Default Digital Output (Read & Write). default output status for DO mode.
- Watchdog (Read & Write), device watchdog value in seconds.
-

Warning ! To save changes please use “Submit” button.

4.4 RS485 Configuration

This page allow to enter configuration parameters and show information of controllers RS485 port.

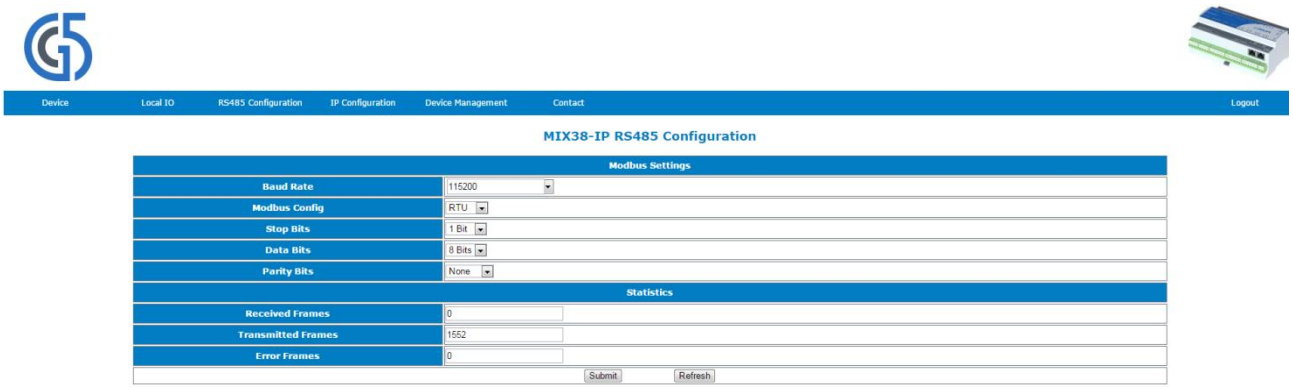

Figure 35 RS485 configuration page

This page allows to set parameters such as:

- Baud rate (Read Only), RS485 baud rate from 2400 up to 115200,
- Modbus Config (Read Only), Modbus Protocol Type- RTU or ASCII,
- Stop Bits (Read & Write), number of stop bits (1 or 2),
- Data Bits (Read & Write), number of data bits transmitted in a single byte (7 or 8)
- Parity Bits (Read & Write), transmission protection as a parity bit added before stop bit (bits).
- Received Frames (Read Only), number of received frames,
- Transmitted Frames (Read Only), number of transmitted frames,
- Error Frames (Read Only), number of error frames,
-

Warning ! To save changes please use “Submit” button.

4.5 IP Configuration

This page allows to change parameters of Ethernet port, Modbus TCP and BACnet IP.

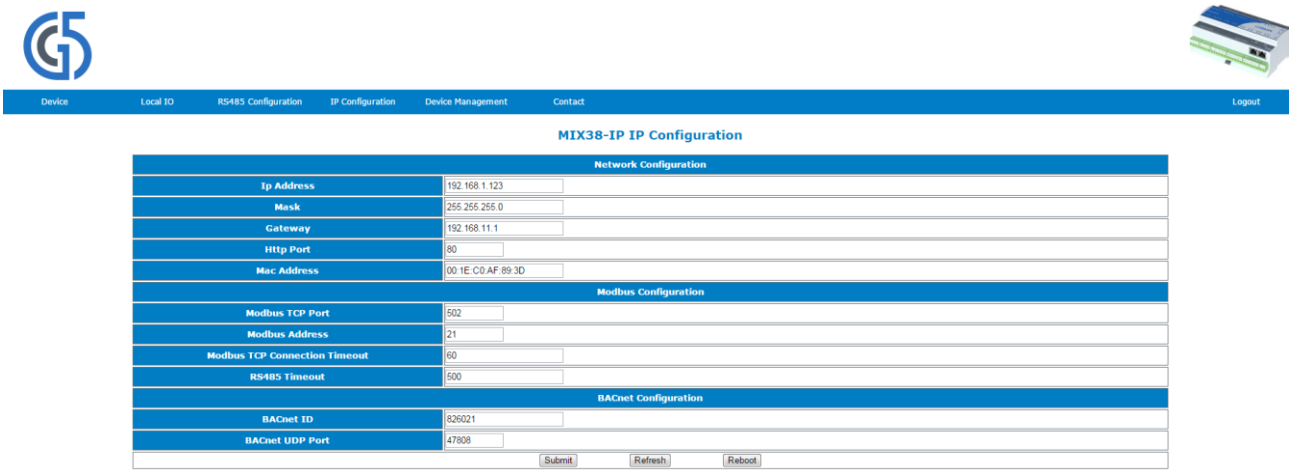

Figure 36 IP configuration page

This page allows to set parameters such as:

- Ip Address (Read & Write), controller Ethernet interface IP address,
- Mask (Read & Write), network mask,
- Gateway (Read & Write), network default gateway,
- Http Port (Read & Write), http port,
- Mac Address (Read Only), Ethernet interface MAC address,
- Modbus Tcp Port (Read & Write), Modbus TCP port number, default 502,
- Modbus Address (Read Only). Modbus device address set by rotary switches,
- Modbus TCP Communication Timeout (Read & Write), timeout for TCP/IP messages,
- RS485 Timeout (Read & Write), timeout for Modbus RTU/ASCII messages,
- BACnet ID (Read & Write),BACnet ID set by rotary switches, this value can be overridden by the user, once overridden by user changing rotary switches will not affect BACnet ID,
- BACnet UDP port (Read & Write),BACnet IP port,
-

Warning ! To save changes please first click “Submit” button and then “Reboot” button

4.6 Device management

This page allows to change password and remote reboot device.

Figure 37 Device management page

Procedure of changing device password:

a) enter current device password in field - Current Device Password,

b) enter new device password in field - New Device Password,

c) enter again new device password in field - Confirm New Device Password,

d) to confirm password change please click “Submit” button,

e) pleas Logout and Login again using new password

Warning ! To reset password to default refer to “Restoring default settings”

4.7 Contact

This page displays information about Manufacture web address and email to technical support.

5 List of supported temperature sensors

No	1	No	2
Sensor	10K3A1	Sensor	10K4A1
β coeffictient	3975K	β coeffictient	3695K
Manufacturers	Aquatrol, Cylon, Honeywell, Johnson, Satchwell, Seachange	Manufacturers	Andover, Delta Controls, Siebe, York
°C	Ω	°C	Ω
−50	667828	−50	441667
-45	491749	-45	330749
−40	335671	−40	239831
-35	241840	-35	181532
−30	176683	−30	135233
-25	131251	-25	105081
−20	96974	−20	78930
−15	72895	−15	61030
−10	55298	−10	47549
−5	42314	−5	37316
0	32650	0	29490
5	25396	5	23462
10	19904	10	18787
15	15714	15	15136
20	12494	20	12268
25	10000	25	10000
30	8056	30	8197
35	6530	35	6754
40	5325	40	5594
45	4367	45	4656
50	3601	50	3893
55	2985	55	3271
60	2487	60	2760
65	2082	65	2339
70	1751	70	1990
75	1480	75	1700
80	1256	80	1458
85	1070	85	1255
90	916	90	1084
95	787	95	939
100	678	100	817
105	587	105	713
110	510	110	624
115	444	115	547
120	388	120	482
125	340	125	426

No	3	No	4
Sensor	10K Carel	Sensor	20K6A1
β coeffictient	3435K	β coeffictient	4262K
−50	329500	Manufacturers	Honeywell
-45	247700	°C	Ω
−40	188500	−40	806800
-35	144100	-35	574400
−30	111300	−30	413400
-25	86430	-25	300400
−20	67770	−20	220600
−15	53410	−15	163480
−10	42470	−10	122260
−5	33900	−5	92220
0	27280	0	70140
5	22050	5	53780
10	17960	10	41540
15	14690	15	32340
20	12090	20	25340
25	10000	25	20000
30	8313	30	15886
35	6940	35	12698
40	5827	40	10212
45	4912	45	8260
50	4161	50	6718
55	3536	55	5494
60	3020	60	4518
65	2588	65	3732
70	2228	70	3098
75	1924	75	2586
80	1668	80	2166
85	1451	85	1823
90	1266	90	1541
95	1108	95	1308
100	973	100	1114
105	857	105	953
110	758	110	818
115	672	115	704
120	597	120	609
125	531	125	528

No	5	No	6
Sensor	2.2K3A1	Sensor	3K3A1
β coeffictient	3975K	β coeffictient	3975K
Manufacturers	Ambiflex, Johnson	Manufacturers	Alerton
°C	Ω	°C	Ω
−50	329500	−50	200348
-45	247700	-45	150524
−40	188500	−40	100701
-35	144100	-35	76853
−30	111300	−30	53005
-25	86430	-25	41048
−20	67770	−20	29092
−15	53410	−15	21868
−10	42470	−10	16589
−5	33900	−5	12694
0	27280	0	9795
5	22050	5	7619
10	17960	10	5971
15	14690	15	4714
20	12090	20	3748
25	10000	25	3000
30	8313	30	2417
35	6940	35	1959
40	5827	40	1598
45	4912	45	1310
50	4161	50	1080
55	3536	55	896
60	3020	60	746
65	2588	65	625
70	2228	70	526
75	1924	75	444
80	1668	80	377
85	1451	85	321
90	1266	90	275
95	1108	95	236
100	973	100	204
105	857	105	176
110	758	110	153
115	672	115	133
120	597	120	117
125	531	125	102

No	7	No	8
Sensor	30K6A1	Sensor	SIE1
β coeffictient	4262K	Manufacturers	Barber Colman, Siebe
Manufacturers	Drayton	°C	Ω
°C	Ω	−50	10732
−30	622911	-45	10624
-25	477393	−40	10517
−20	331876	-35	10344
−15	245785	−30	10172
−10	183697	-25	9913
−5	138502	−20	9654
0	105305	−15	9320
5	60713	−10	8933
10	62347	−5	8496
15	48511	0	8044
20	38019	5	7489
25	30000	10	6938
30	23828	15	6370
35	19046	20	5798
40	15317	25	5238
45	12390	30	4696
50	10079	35	4185
55	8243	40	3707
60	6777	45	3271
65	5600	50	2875
70	4650	55	2521
75	3879	60	2206
80	3251	65	1929
85	2737	70	1685
90	2313	75	1472
95	1963	80	1287
100	1672	85	1127
105	1430	90	986
110	1228	95	866
115	1058	100	760
120	915	105	670
125	793	110	590
		115	522
		120	462
		125	410

No	9	No	10
Sensor	TAC1	Sensor	SAT1
β coeffictient	3500K	Manufacturers	Satchwell
Manufacturers	TAC	°C	Ω
°C	Ω	−50	9719
−40	39024	-45	9652
-35	29358	−40	9584
−30	22284	-35	9467
-25	17073	−30	9349
−20	13192	-25	9159
−15	10276	−20	8968
−10	8068	−15	8708
−5	6382	−10	8396
0	5085	−5	8031
5	4078	0	7614
10	3294	5	7150
15	2676	10	6649
20	2188	15	6121
25	1800	20	5580
30	1488	25	5039
35	1237	30	4513
40	1034	35	4012
45	869	40	3545
50	733	45	3117
55	622	50	2730
60	529	55	2386
65	453	60	2082
70	389	65	1816
75	335	70	1585
80	290	75	1385
85	252	80	1213
90	220	85	1064
95	192	90	937
100	169	95	828
105	149	100	734
110	131	105	654
115	116	110	585
120	103	115	525
125	92	120	474
		125	429

No	16	No	16
Sensor	Pt1000	Sensor	Pt1000
Manufacturers	Honeywell, Sauter, Serck, Siebe, Cylon	Manufacturers	Honeywell, Sauter, Serck, Siebe, Cylon
°C	Ω	°C	Ω
-50	803	310	2156
-40	843	320	2192
-30	882	330	2227
-20	922	340	2262
-10	961	350	2297
0	1000	360	2332
10	1039	370	2367
20	1078	380	2402
30	1117	390	2436
40	1155	400	2471
50	1194		
60	1232	No	17
70	1271	Sensor	Ni1000
80	1309	Manufacturers	Sauter
90	1347	°C	Ω
100	1385	-50	743
110	1423	-40	791
120	1461	-30	841
130	1498	-20	893
140	1536	-10	946
150	1573	0	1000
160	1611	10	1056
170	1648	20	1112
180	1685	30	1171
190	1722	40	1230
200	1759	50	1291
210	1795	60	1353
220	1832	70	1417
230	1868	80	1483
240	1905	90	1549
250	1941	100	1618
260	1977	110	1688
270	2013	120	1760
280	2049	130	1833
290	2085	140	1909
300	2121	150	1987